

# Quick guide Nokia 1661

**Making a call** Enter a phone number and press the Talk key (Green key).

**Answering a call** Press the Talk key (Green key).

**Ending a call** Press the End key (Red Key).

**Declining a call** Press the End key.

**To Redial** Press the Talk key twice.

## Turning the call volume up or down

Press the scroll key to the up to increase the volume while on the call

Press the scroll key to the down to decrease the volume while on the call

## Turn the ringer volume up or down

Press "Menu"

Scroll to **Settings**, press "Select"

Scroll to **Tone settings**, press "Select"

Scroll to **Ringer volume**, press "Select"

Scroll to volume setting, press "OK"

## Changing the ringtone

Press "Menu"

Scroll to **Settings**, press "Select"

Scroll to **Tone settings**, press "Select"

Scroll to **Ringtone**, press "Select"

Scroll to ringtone, press "OK"

## Writing and sending a text messages

Press "Menu"

Scroll to **Messages**, press "Select"

Scroll to **Create message**, press "Select"  
Enter text, press "Options"  
Scroll to **Send**, press "Select", press "Search" or enter phone number  
Scroll to contact, press "OK"  
Press "OK"

## **Adding someone's name and number to my phonebook**

Press **Contacts**, press "Select"  
Scroll to **Add contact**, press "Select"  
Enter name, press "OK"  
Enter phone number, press "OK"  
Scroll to caller icon, press "Use"

## **Calling someone whose number is saved in my phone**

Press "Menu"  
Scroll to **Contacts**, press "Select"  
Scroll to **Find**  
Scroll to contact, press Talk key (Green key).

## **Locking the keypad**

Press Menu followed by the \* Key.  
To unlock the keypad press Unlock followed by the \*Key